



LG Thrill 4G Speaker Replacement

This guide will show you how to remove and replace the speaker for the LG Thrill 4G.

Written By: Kenny Richmond



INTRODUCTION


Make sure your phone is turned off.



TOOLS:


- [Phillips #00 Precision Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover Removal

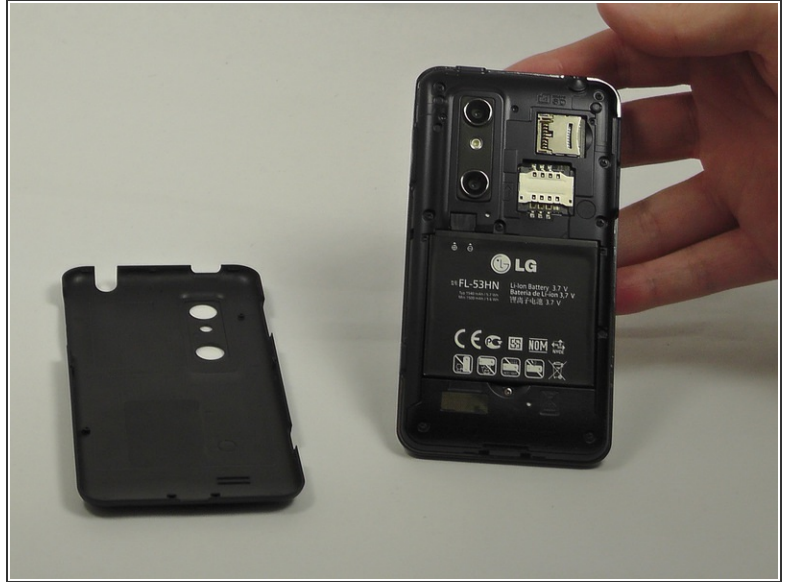

- Remove the back cover of the phone using your fingernail or a plastic opening tool.
- ⓘ There is a notch located at the bottom of the phone that can be used for opening leverage.

Step 2 — Battery Removal

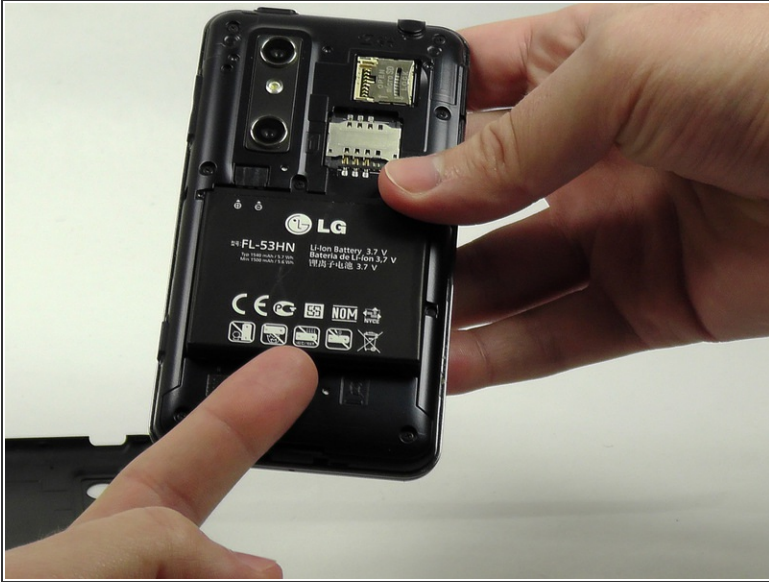

- i The battery is located at the bottom half of the phone with the LG logo on it.
- i There is a semi-circular notch at the bottom edge of the battery with the silver screw in it.
 - Place a finger in the notch and push up against the battery to pop it out.

Step 3 — Screw Removal



- Remove three screws from the bottom of the phone. These three screws are located on the speaker itself.
- 2 - 5.5mm length PH00 screws
- 1 - 4mm length PH00 screws

Step 4 — Speaker Removal



- There is a notch located at the bottom of the speaker. Insert a fingernail in to the notch and pull up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-02 09:57:01 AM.